



Shenzhen Yunyue Intelligent Technology Co., Ltd.

Address: Building 9, 1901, Qianhai Kexing Science Park, Laodong Community, Xixiang Street, Bao'an District, Shenzhen, Guangdong, P.R.C.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Shenzhen Yunyue Intelligent Technology Co., Ltd. and Shenzhen Yunyue Intelligent Technology Co., Ltd. is the warrantor of this product.

© 2024 Shenzhen Yunyue Intelligent Technology Co., Ltd. All rights reserved. Shenzhen Yunyue Intelligent Technology Co., Ltd. reserves the rights to change content and product specifications included in this user manual without prior notice at any time.

Version: 1.0

PHILIPS

2000 Series

Smart safe box

SBX202

User manual



To register your product as well as obtain support, please go to:
www.philips.com/support

Models and dimensions

Models	Outside dimensions (H×W×D)	Weight
SBX202-5C0	500×420×360 mm	Please refer to the label on product for weight information
SBX202-6C0	600×430×390 mm	
SBX202-7C0	700×450×420 mm	

Please read this user manual carefully before using this product.

Thank you for purchasing Philips-branded products. For your safety, please read this user manual carefully before using the product. Any personal injury, property or other loss caused by not following the user manual or precautions, no liability will be assumed by Philips.

Kind reminder:


This user manual is used as a guide. The photos, pictures, or illustrations provided in the manual are for explanation purposes, which may differ from the specific product, please refer to the actual product. Due to product version upgrade or other needs, Yunyue may update this manual timely without prior notice. If you need the latest version of the manual, please download it from the Philips website (www.philips.com/sup-port). The copyright of any part from this manual, including text, pictures or illustrations, belongs to Yunyue. Without written permission, no corporation or individual may extract, copy, translate, or modify all or part of this manual in any way. Unless otherwise agreed, Yunyue does not make any expressions or implied representations and guarantees.

Content


Get to know your smart safe box	01
Keypad	03
First use	04
Add fingerprint and PIN code	05
Delete fingerprint and PIN code	06
Safe mode	07
Keyhole cover	08
Language setting	09
False alert	09
Vibrant alert	10
Low-battery alert	11
Wall-mount instructions	11
After-sales support	13
Warranty card	14

Get to know your smart safe box


1. Keypad
2. Handle
3. Door
4. Base
5. Divider board
6. Lock bolts
7. Battery compartment

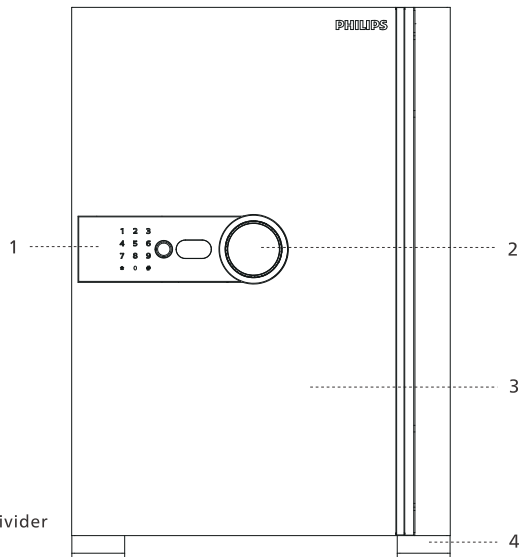

⚠ Attention:
Model 5C0 only has one divider board.

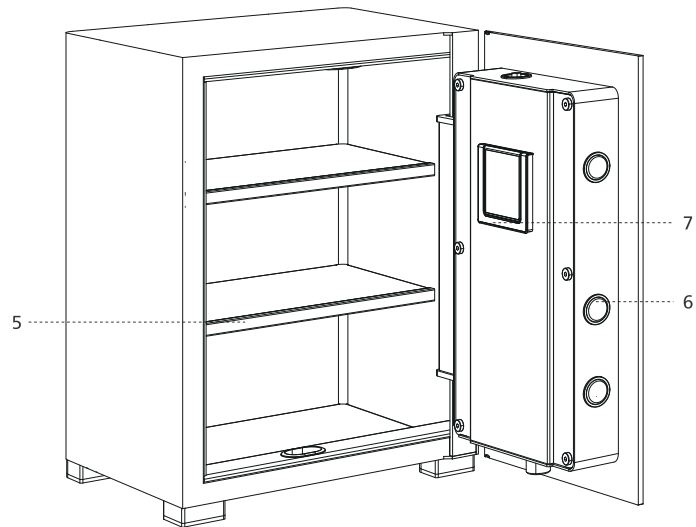

Keypad

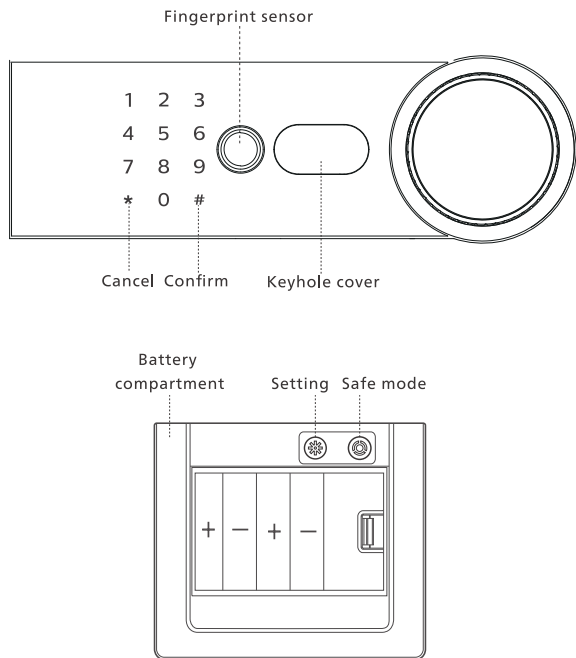

First use

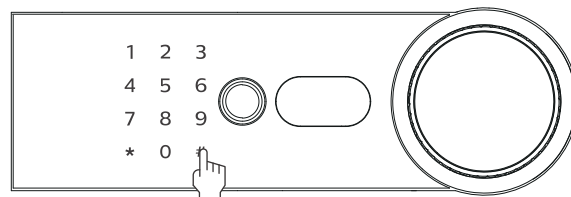


Figure 1

1. Insert 4 AA batteries into the external battery box, then plug it in the external power connector on the safe.
 2. As shown in Figure 1, enter any fingerprint or simply touch the panel to wake up the keypad. Enter default PIN code '1234' and press '#' to confirm. After hearing a voice prompt 'Lock opened', open battery compartment inside the safe and insert in 4 AA batteries to complete the first use.
- ⚠ Attention:** do not place the external battery box inside the safe! Besides powering up the safe for its first use, the external battery box is also for emergency use when the main power supply is down.

Add fingerprint and PIN code

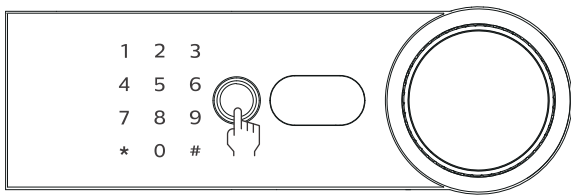



Figure 2


1. Open safe door and press the red setting button '  ' on the battery compartment. After hearing a voice prompt 'Please input the password or fingerprint', enter your fingerprint as shown in Figure 2. A voice prompt 'Configure fingerprint successfully.' indicates successful operation. If the entering fails, there will be a voice prompt 'Configure fingerprint failed'. The system will automatically exit if there is no entering in 8 seconds.

 Attention: this product supports a maximum of 30 fingerprints.

2. After the fingerprint is successfully entered, you can continue with PIN code entering. Enter a 3 - 8 digit PIN code and press '#' to confirm. There will be a voice prompt 'Please input the new password again'. Enter the PIN code again and press '#' to confirm. There will be a voice prompt 'Configure password successfully', indicating successful operation.

 Attention: this product supports a maximum of 10 sets of PIN codes.

Delete fingerprint and PIN code

As shown in Figure 3, long press the red setting button '  ' on the battery compartment for 3 seconds. There will be a voice prompt 'Initial successfully', indicating that all PIN codes and fingerprints have been successfully deleted and the safe has restored to factory settings.

 Attention

1. This product does not support deleting single fingerprint or PIN code.
2. After the system restores to factory settings, 'Vibration alert' and 'Safe mode' will also return to the initial settings, namely being off.

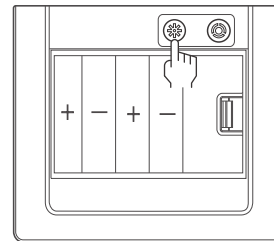


Figure 3

Safe mode

1. Under 'Safe mode', a combination of 2 registered passwords are required to unlock the safe, either 'fingerprint + fingerprint', 'fingerprint + PIN code', 'PIN code + fingerprint' or 'PIN code + PIN code'.
2. As shown in Figure 4, press the black safe mode button '⊗' on the battery compartment and there will be a voice prompt 'Enter high security mode successfully', indicating successful activation. Press the button again can turn 'Safe mode' off.

⚠ Attention:
under 'Standard mode', any one set of registered PIN code or fingerprint can unlock the safe.

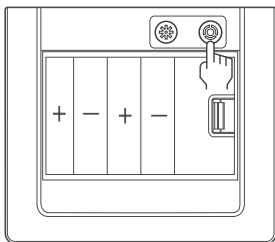


Figure 4

Keyhole cover

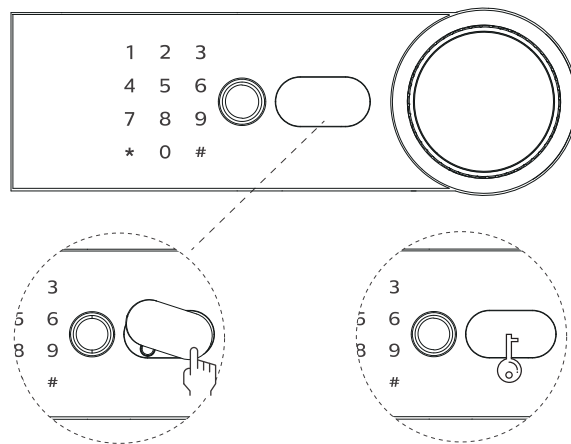



Figure 5

1. As shown in Figure 5, press the right end of the keyhole cover, and the left side of the cover will jump up. Take off cover, find keyhole and open the safe with mechanical key.

⚠ Attention:
do not place the mechanical key into the safe!

Language setting


Keep the battery compartment unpowered, long press the red setting button '  ' on it and do not release. Put batteries into the compartment to power the safe up, and release the button until hearing a beep, then short press the 'Setting' button 4 times to switch system language between Chinese and English. The switch will complete in 4-5 seconds.

False alert

5 times of wrong fingerprint entering or 3 times of wrong PIN code entering will activate false alert. The high-pitch sound alert will last for 20 seconds, while the system to be locked for 180 seconds.

 **Attention:**
the safe can not be operated under 'Locked' state caused by false alert.

Vibrant alert

1. As shown in Figure 6, long press the black safe mode button '  ' for 3 seconds. There will be a voice prompt 'Shake alarm opened', indicating successful operation. Long press it for another 3 seconds can turn the 'Vibration alert' off.
2. When the safe detects a certain intensity of vibration, it will activate a 20-second vibration alert. Any registered fingerprint or PIN code can be used to stop the alert.

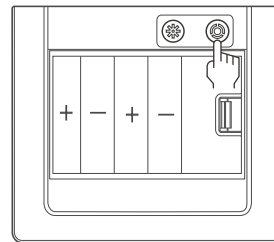


Figure 6

Low-battery alert

If the voltage of the main power supply goes below 4.8 V, the system will activate a 'Low-battery alert'. When using the safe, you will be reminded with a voice prompt 'Battery is low'. Once having this alert, please replace batteries in time.

- ⚠ Attention:**
low-voltage may affect the normal use of the safe. Please replace batteries in time when receiving low-voltage alert.

Wall-mount instructions

As shown in Figure 7, select an appropriate installation position, open the safe door and take out the plugs on the back panel. Mark hole positions on the wall or cabinet and drill holes for expansion tubes. Put expansion tubes in the holes, attach the safe and fix it with screws.

- ⚠ Attention**
1. Concrete wall is recommended for mounting the safe.
 2. For safety reasons, please make sure the safe is firmly attached to the wall.

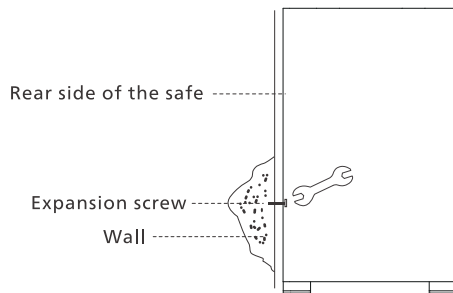


Figure 7

After-sales support

If you encounter any problems when using the product, please contact local authorized distributors.

Warranty card

Product model		Product serial number		
Invoice No.		Seller		
Address of seller				
Date of sales		User name		
Contact of user		Address of user		
Failure description				
Maintenance records	Date	Issue	Maintenance staff	User signature